




### 3 Current sensors

Current sensors TE / TR / TF

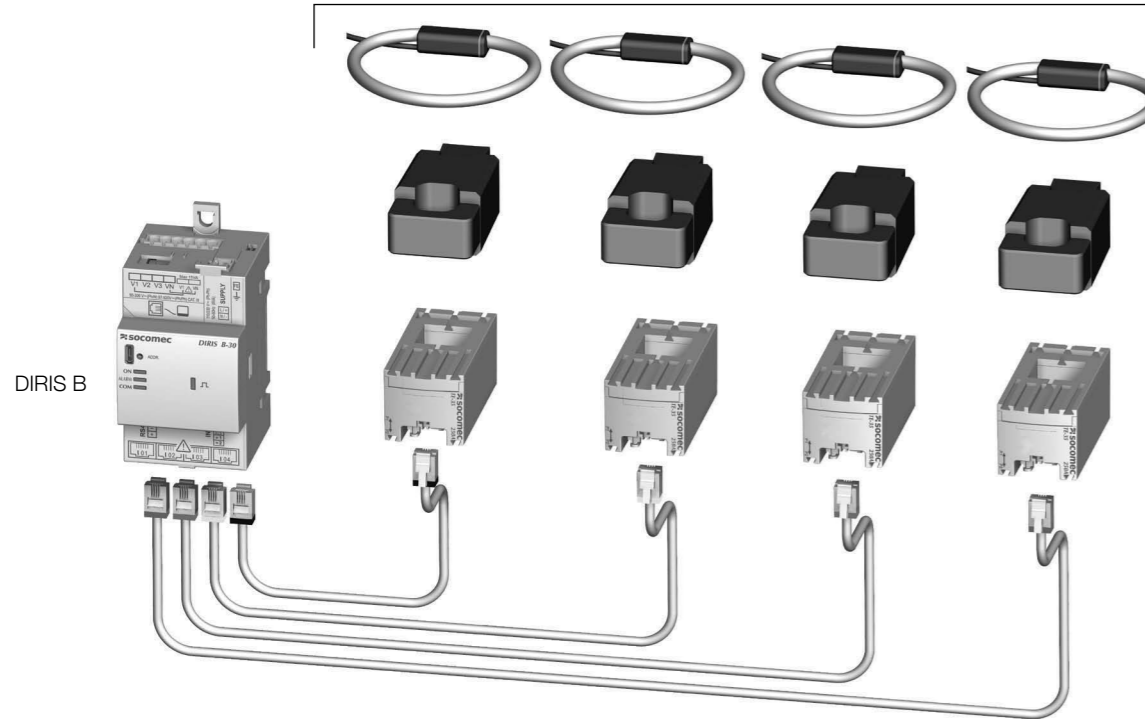


**Recommendations:**

- Use Socomec Current Sensors cables type RJ12 straight, twisted pairs, non-shielded, 300V cat.III. rated, -20 / +70 °C.
- It is recommended to mount all the current sensors with the same orientation.
- Always start with current sensor input 1.


### 6 Main network connections and loads

(1) See step 4


CT = Current sensor      3~ = Balanced load      1~ = Unbalanced load  
Fuse 0.5 A gG / BS 88 2A gG / 0.5 A class CC

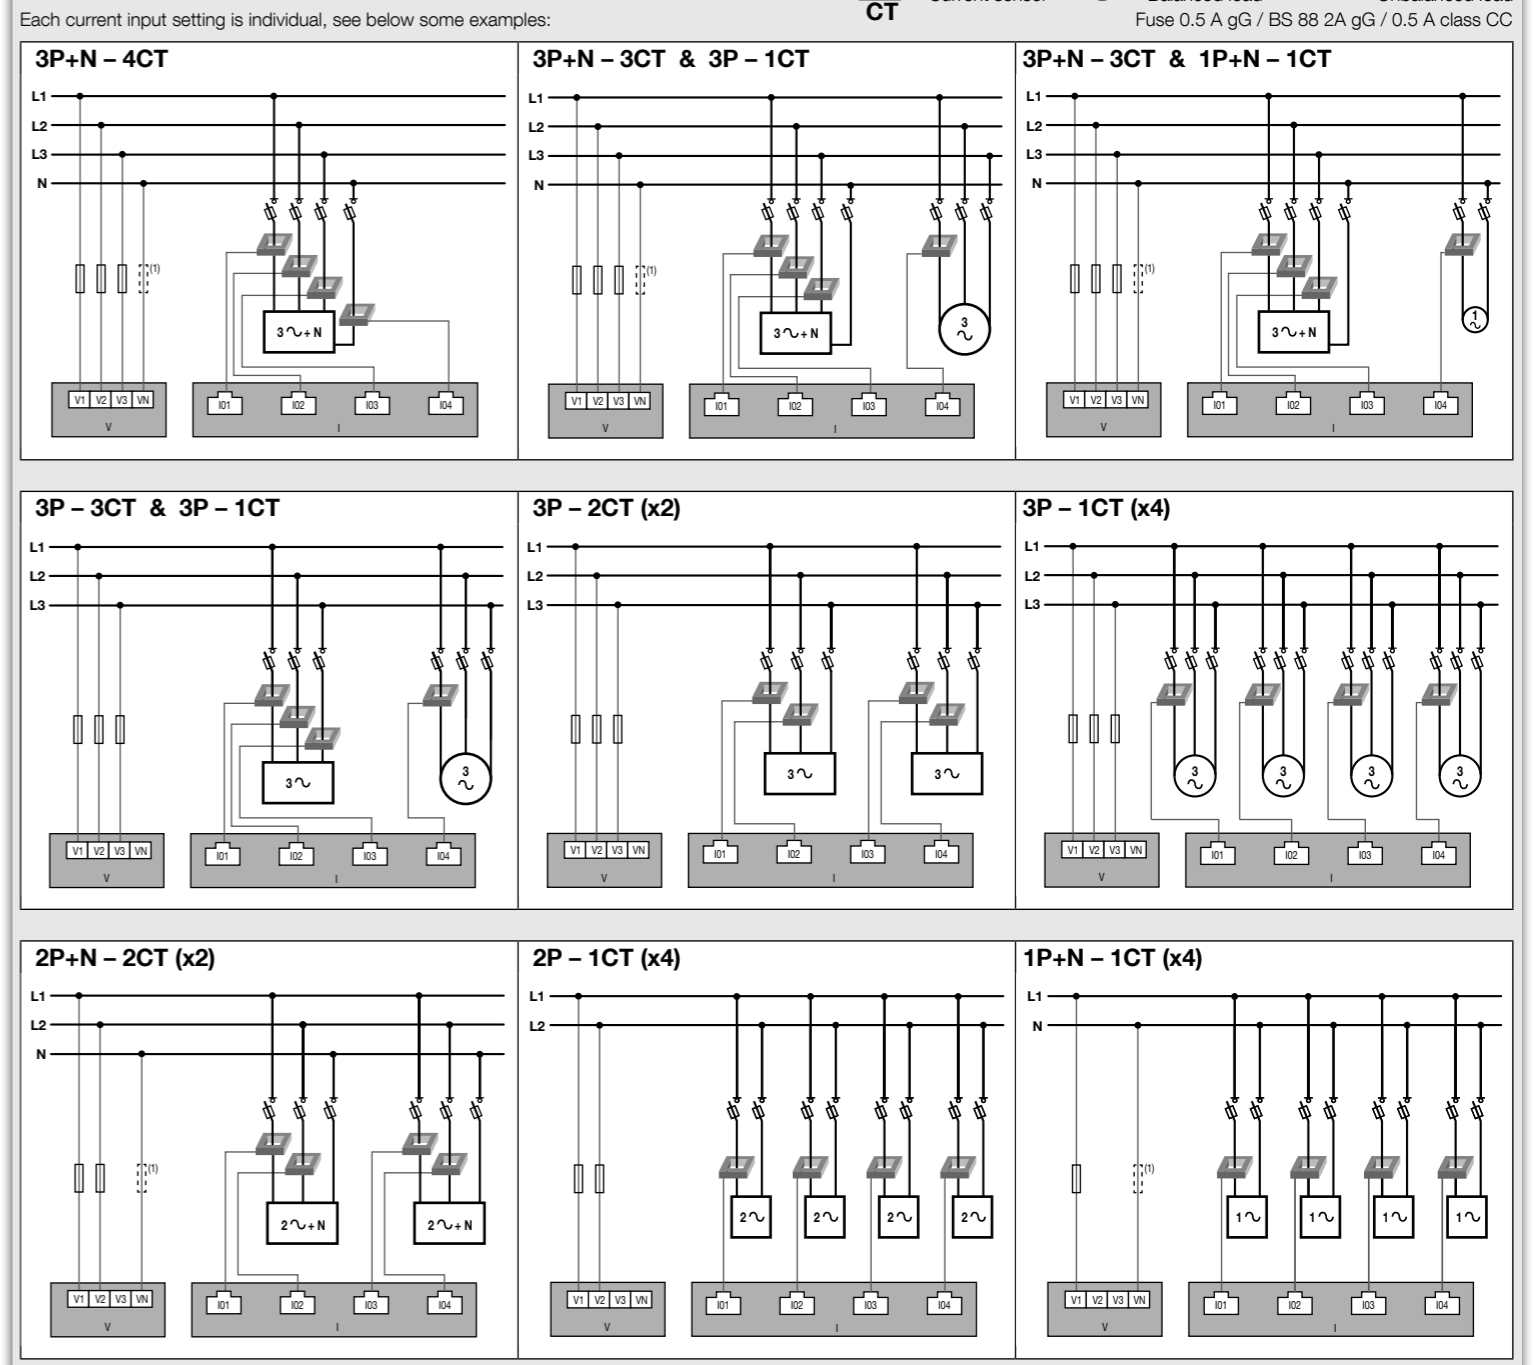


### 4 Auxiliary supply

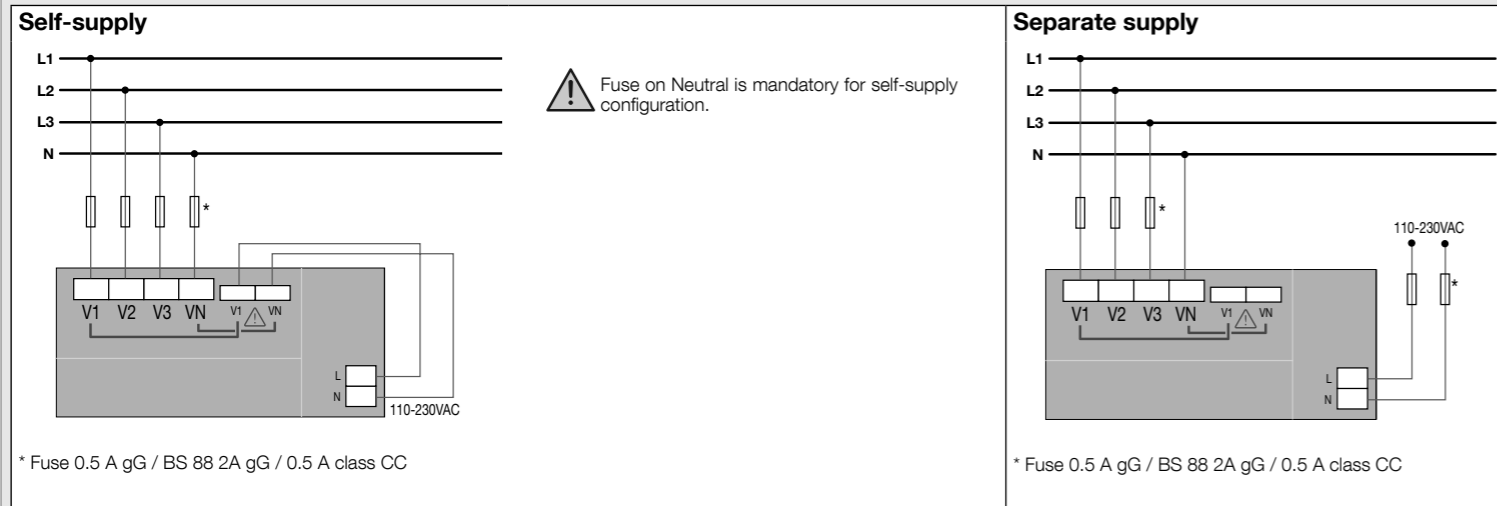

### 5 Inputs

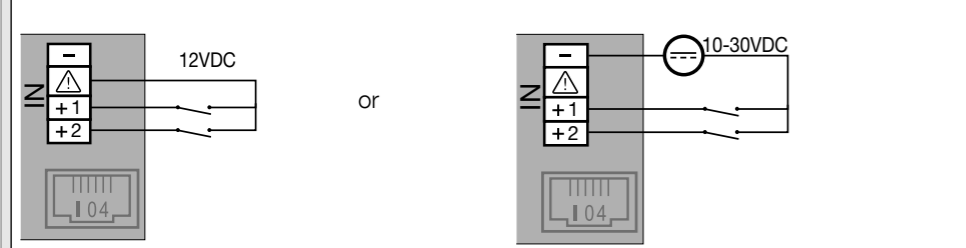

### Communication

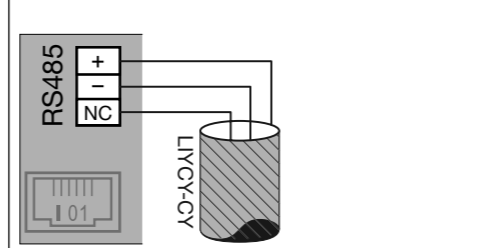

### 7 Configuration

