


3 Current sensors

Current sensors TE / TR / TF

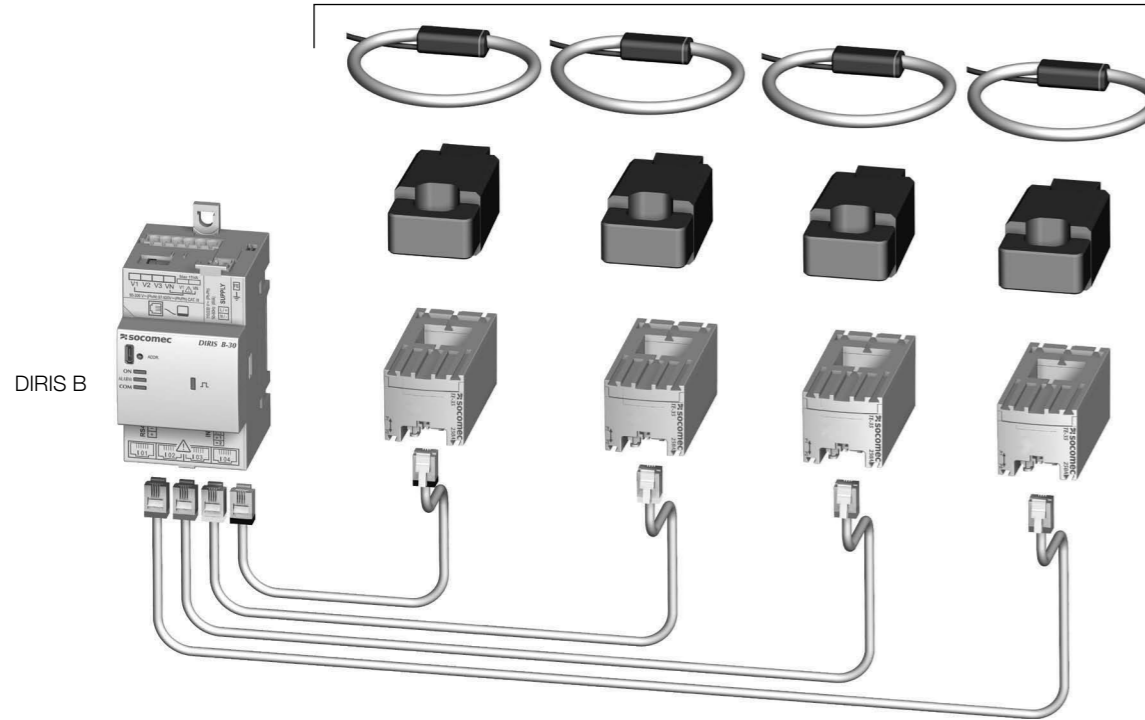


Recommendations:

- Use Socomec Current Sensors cables type RJ12 straight, twisted pairs, non-shielded, 300V cat.III. rated, -20 / +70 °C.
- It is recommended to mount all the current sensors with the same orientation.
- Always start with current sensor input 1.


6 Main network connections and loads

(1) See step 4


CT = Current sensor 3~ = Balanced load 1~ = Unbalanced load
Fuse 0.5 A gG / BS 88 2A gG / 0.5 A class CC

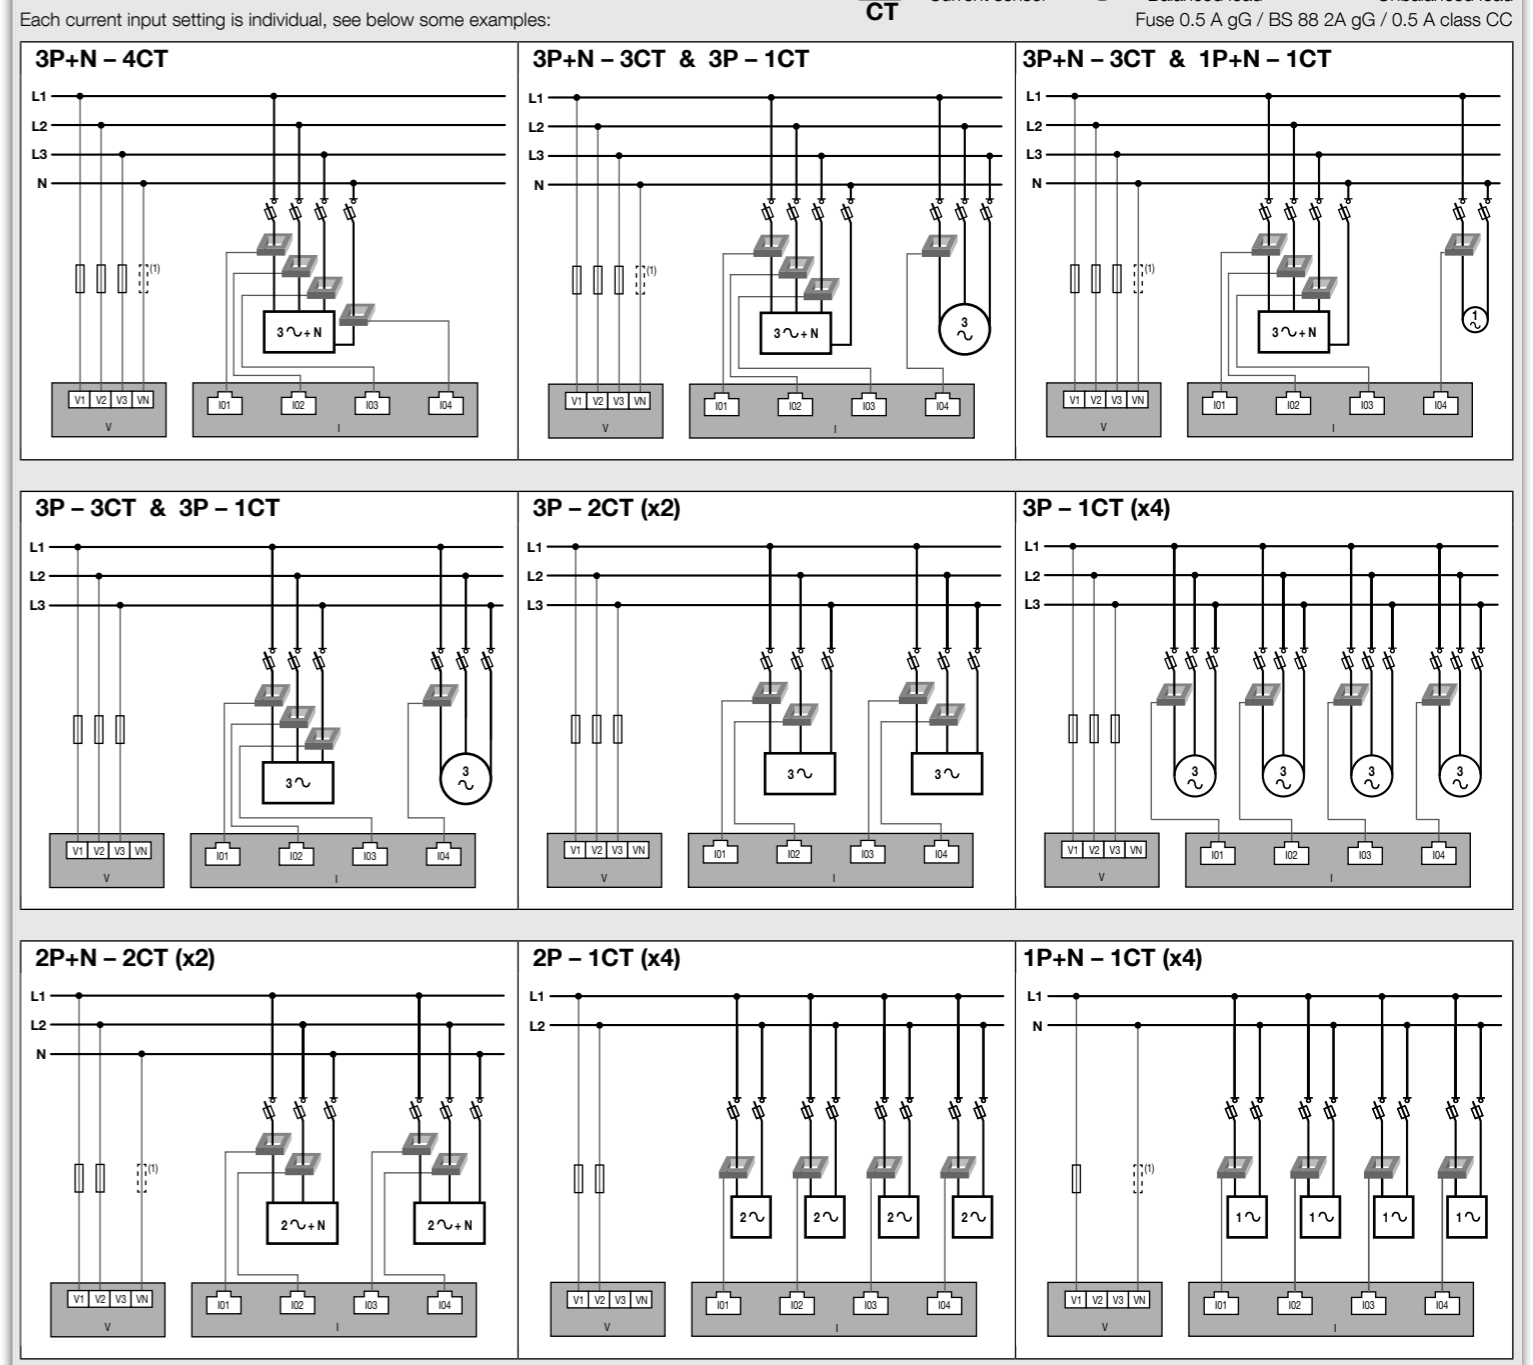


4 Auxiliary supply

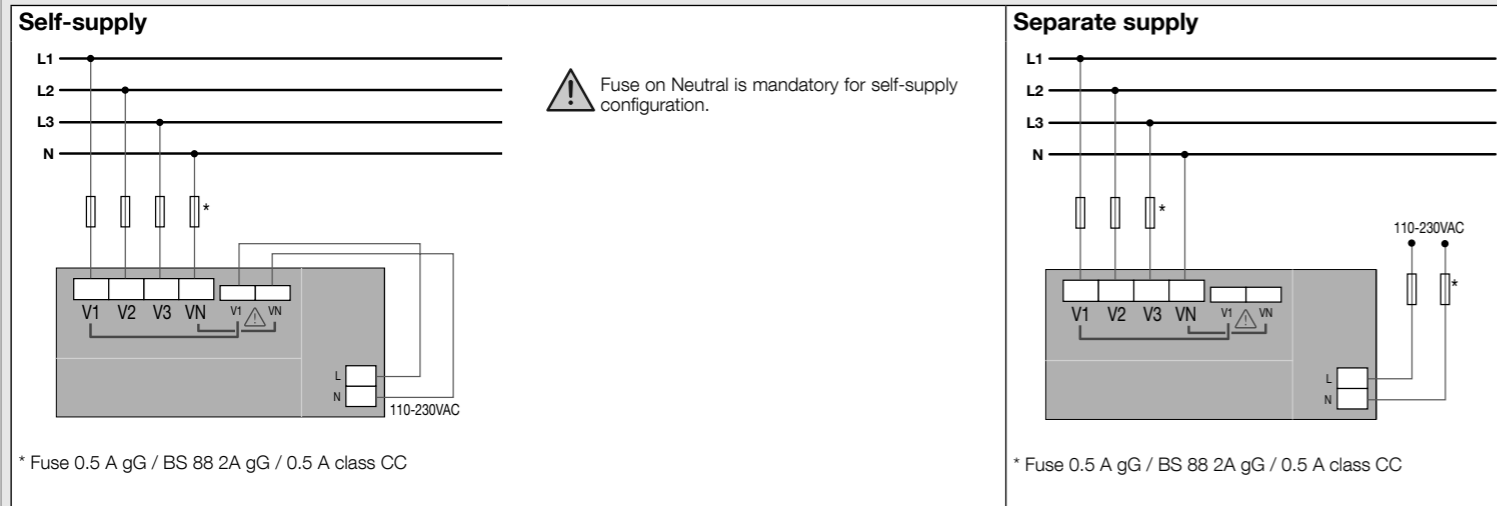

5 Inputs

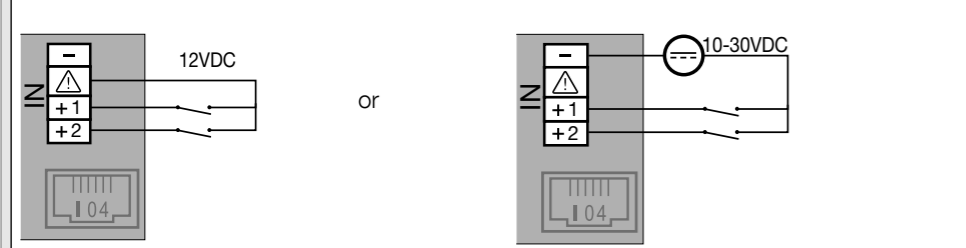

Communication

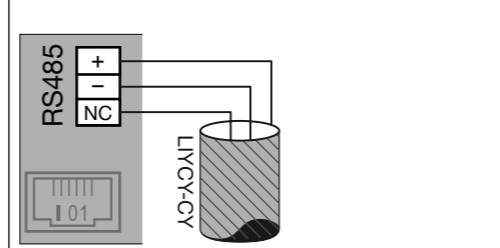

7 Configuration

